


VALVOLA A CORSOIO

SLIDE VALVE

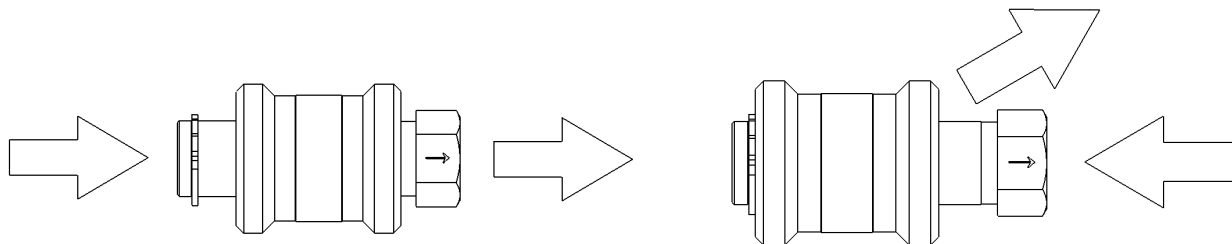

DESCRIZIONE / DESCRIPTION

Le valvole a corsoio sono valvole di intercettazione ON-OFF con la variante che in posizione di chiuso lasciano defluire l'aria dell'utilizzo in ambiente, scaricando quindi la pressione nell'impianto a valle.

The slide valve are reversing valves ON-OFF with the variant that in the closed position it allows the used air to flow out to atmosphere.

FUNZIONAMENTO / FUNCTION

Nella posizione ON l'aria proveniente dall'impianto si convoglia verso l'utilizzo attraverso il collegamento dei fori radiali sullo stelo della valvola.

Spostando il manicotto in posizione OFF si esclude il collegamento tra impianto e utilizzo e l'aria che si trova in quest'ultimo, defluisce automaticamente in ambiente per differenza di pressione.

In the opened position the air which comes from the system directs itself towards the circuit across the connection of the radial holes on the stem of the valve. Throwing the sleeve in the closed position you leave out the connection of the radial holes and the air which is still in the circuit due to the difference of pressure with the atmosphere, flows out automatically.

DIREZIONE DI FLUSSO / DIRECTION OF THE FLOW

Vedi immagini.
Look pictures.

IMPIEGO / USE

Aria compressa.
Compressed air.

PRESSIONE DI ESERCIZIO / WORKING PRESSURE

-0.99 bar (0.099 MPa) +10 bar (1.0 MPa)

TEMPERATURA DI ESERCIZIO / WORKING TEMPERATURE

-20 °C / +80 °C

MATERIALI / MATERIALS

Manicotto / Sleeve : Alluminio anodizzato / Anodized aluminium

O-Ring / O-Ring : NBR / NBR

Stelo / Stem : Ottone cromato / Chrome-Nickel plated brass

Seeger / Seeger : Acciaio / Steel

COLORE DEL MANICOTTO / SLEEVE COLOUR

Nero, rosso e blu.
Black, red and blue.

MISURE / SIZES

1/8" – 1/4" – 3/8" – 1/2"

ESTREMITÀ / EXTREMITY

Gas cilindrica conforme ISO 228.
Parallel gas in conformity with ISO 228.

FORMA / SHARE

Femmina – Femmina / Female – Female
Maschio – Femmina / Male – Female

